


Tools Required: Stanley Knife or similar, rubber mallet & adjustable spanner

1

Carefully unpack the headboard, foot-end, sides & centre beam and the platform top. (If you have the ottoman insert you not have a centre beam or platform top but you will also have 1 or 2 slatted mattress supports and a base insert).

2

Place the headboard against the wall where you want your bed to be situated and attach the sides, securing in place with the nuts provided. The metal tabs on the sides will hook over the bolts protruding from the headboard.

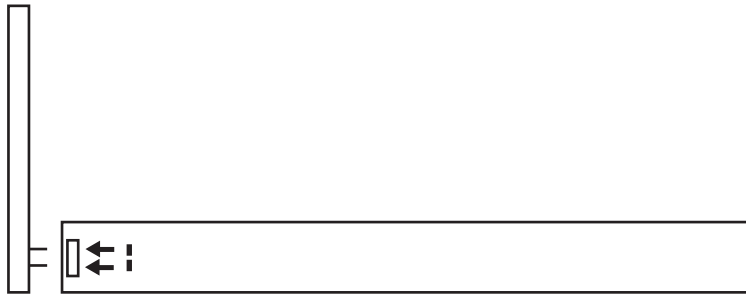

3


Then attach the foot-end to the sides at the opposite end, again securing in place with the nuts provided, as done with the headboard.

Note: If you have the ottoman insert option, position the base insert inbetween the sides and headboard before securing the footend to the sides.




4

Insert the centre beam into the metal cups on the headboard and foot-end (This step does not apply where there is an ottoman insert).




5

Now place the platform top onto the centre beam, folding it outwards and laying it down in place (This step does not apply where there is an ottoman insert).

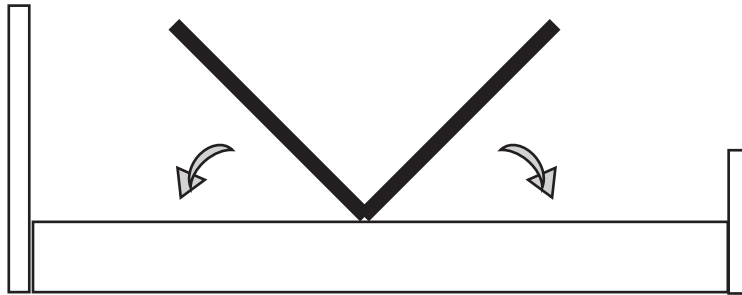

6

Now place your mattress on to the platform top (Skip to the next page for ottoman insert instructions if required).

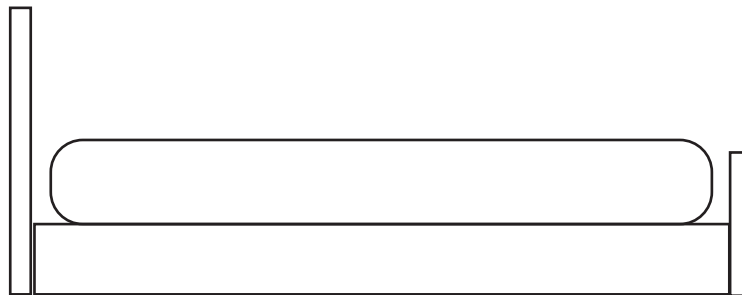


7

And that's it, you're done! (Unless you have the ottoman insert, in which case continue to the next page for continued instructions).

Ottoman insert installation instructions

A


For all sizes above a double, join the 2 slatted mattress supports with the supplied fixing hardware. (Skip this step for single & double sized inserts.)

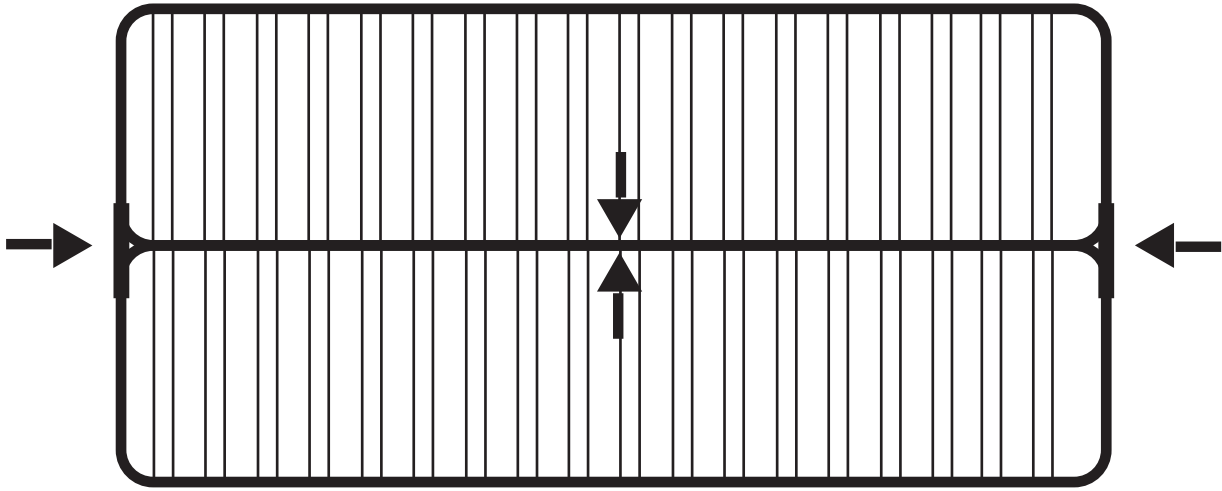

B

Raise the metal hinges on both sides of the bed frame so that they are both angled at 45 degrees. Line up the slatted mattress support with the hinges, carefully ensuring the 4 holes on both line up with each other. Secure in place with the supplied nuts and bolts.

Note: Make sure you line up the holes on the slatted support closest to the headboard with the longer holes closest to the headboard on the hinges. This gives you the necessary adjustability to line up all the holes correctly.

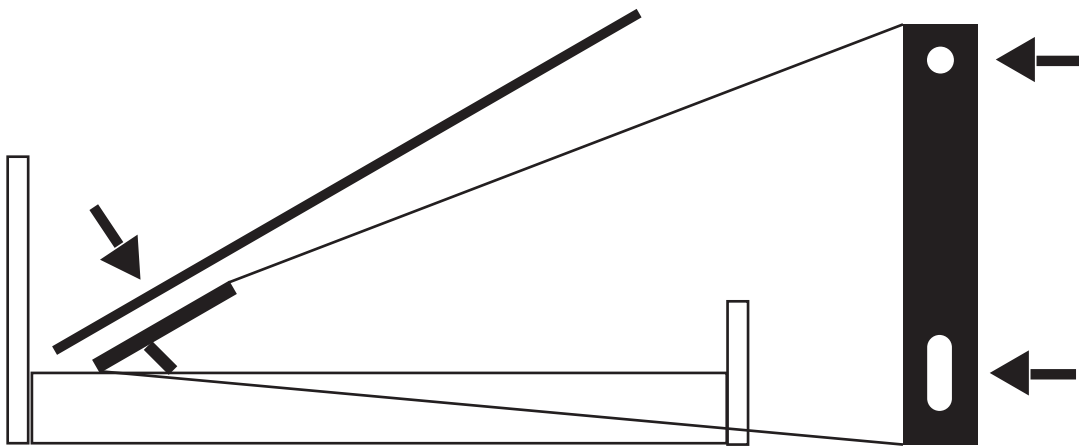

C

Now place secure the mattress support onto the slatted support at the headboard end, there are 2 holes for this. This may require some force with a rubber mallet. And that's it, you're done! Simply lay your mattress onto the slatted mattress support and close.

